


304 MR

3/2 NC raccordi automatici per tubo $\varnothing 4$ (sotto),
leva rullo




3/2 NC push-in fittings for $\varnothing 4$ tube (ports on the bottom),
roller lever



314 MR

3/2 NA raccordi automatici per tubo $\varnothing 4$ (sotto),
leva rullo


3/2 NO push-in fittings for $\varnothing 4$ tube (ports on the bottom),
roller lever

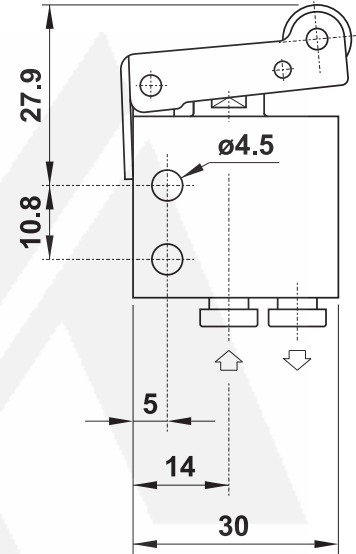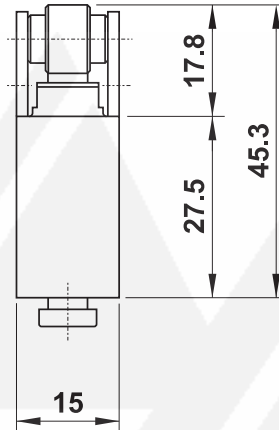

204 MR

2/2 NC raccordi automatici per tubo $\varnothing 4$ (sotto),
leva rullo


2/2 NC push-in fittings for $\varnothing 4$ tube (ports on the bottom),
roller lever



304 MS

3/2 NC raccordi automatici per tubo $\varnothing 4$ (sotto),
leva unidirezionale




3/2 NC push-in fittings for $\varnothing 4$ tube (ports on the bottom),
uni-directional lever



314 MS

3/2 NA raccordi automatici per tubo $\varnothing 4$ (sotto),
leva unidirezionale

3/2 NO push-in fittings for $\varnothing 4$ tube (ports on the bottom),
uni-directional lever

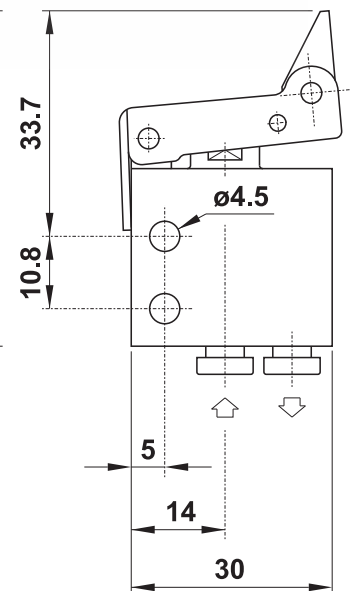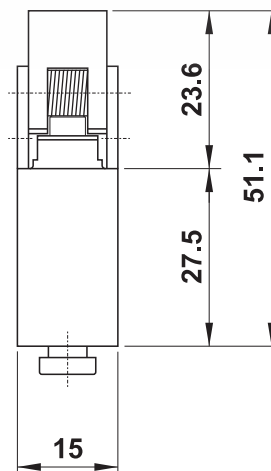

204 MS

2/2 NC raccordi automatici per tubo $\varnothing 4$ (sotto),
leva unidirezionale

2/2 NC push-in fittings for $\varnothing 4$ tube (ports on the bottom),
uni-directional lever

